



PWR 02


Power supply module

Datasheet

Description

Power supply module; the unit gets the 24V supply from the input connector and provides proper feeding for modules on bus. It also provides one RJ-45 for external extension of the FLXIOTM bus. Main characteristics:

- 5 V / 3 A main output
- Auxiliary 24 V / 2 A electronic protected output
- Overcurrent and short circuit protection
- RJ-45 connector for FLXIOTM bus
- Status and diagnostic LEDs

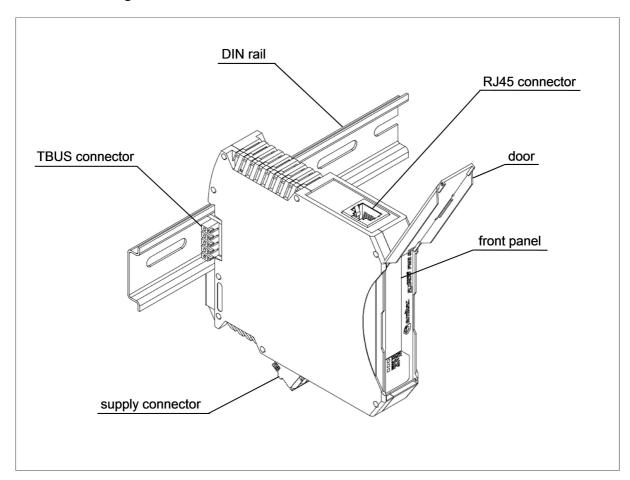



Ordering informations

Products	SMITEC part number
Power supply, complete with accessories (power connector and TBUS connector)	KZ010355

Accessories	SMITEC part number
Power supply connector (Phoenix Contact p/n 1910377)	KF100009
TBUS connector (Phoenix Contact p/n 2713722)	KF101034
Power supply fuse (Littelfuse p/n 0452 005)	KD200038

Documentation	SMITEC part number
Installing instructions for PWR 02 (multilanguage)	DK400061
Datasheet for PWR 02 (english)	DK400064
FLXMOD system integration manual (english)	DK400076



Technical data

General data		
Housing dimensions (width x height x depth)	22.5 mm x 99.0 mm x 114.5 mm	
Weight	95 g (without connectors), 107 g (with connectors)	
Permissible operating temperature	+5° to +55°C	
Permissible storage and transport temperature	-25° to +85°C	
Permissible humidity	10% to 95% not condensing	
Permissible air pressure (operation)	80 to 106 kPa (up to 2000 m above sea level)	
Permissible air pressure (storage and transport)	70 to 106 kPa (up to 3000 m above sea level)	
Degree of protection	IP20 according to IEC 60529	
Connection method for connectors	Spring cage terminals	
Conductor cross-section (power connector)	0.2 to 2.5 mm ² (24 – 12 AWG)	
Functional earth connection	To the DIN rail with spring contact	
Mode state visual indicators	Input power (PWR), bus power 1 (BP1) and bus power 2 (BP2) LED lamps on front panel	

Power supply	
Main power supply V _M	24 V DC (-15% ÷ + 20% according to IEC 61131-2)
Maximum allowed ripple	5% of supply voltage (according to IEC 61131-2)
Current consumption from main supply	3 A max.
Supply overvoltage protection on V _M	Unidirectional Zener clamp (V _z > 30 V)
Supply reverse polarity protection	Input shunt diode, reverse connected
Supply fuse	5 A
Input power visual indicators	Green LED lamp, lighted if supply is present (PWR)
Local bus power #1	5 V DC / 3 A, regulated
Local bus power #1 protections	Overcurrent, catastrophic overvoltage
Local bus power #1 visual indicators	Green LED lamp, lighted if supply is present (BP1)
Local bus power #2	24 V DC / 2 A, unregulated
Local bus power #2 capacitive load	120 μF max
Local bus power #2 protections	Overcurrent
Local bus power #2 visual indicators	Green LED lamp, lighted if supply is present (BP2)

Bus extension	
Bus external connections	By RJ-45 connector
Recommended cable type	Straight CAT 5E Ethernet cable
Max cable length	3 m
Bus termination resistor	none



Connections

The module has two connectors: a power connector and a RJ-45 connector. They allow easy "plug and play" of the module, and also a fast replacement of a faulty unit.

Power connector


The power connector is located on the bottom side of the module. For the pinout, refer to the illustration at right.

Refer to the FLXMOD System Integration Manual for power connections topology.

RJ 45 connector

The RJ 45 connector is located on the upper side of the module; it permits the external extension of the FLXIOTM bus using a standard Ethernet cable.

Refer to the FLXMOD System Integration Manual for details on correct bus extension topology.

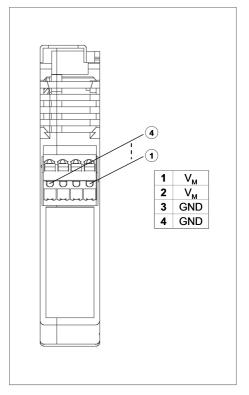



Diagnostic and status indicators

The module is provided with a series of LED lamps on the front panel (see illustration).

The green input power (**PWR**) LED is lighted if the 24 V supply (V_M) is present and the internal fuse is not blown.

The green bus power 1 (**BP1**) LED is lighted if the 5 V output is present. If the indicator is off or blinking, there is an excessive current absorption or a faulty power supply unit.

The green bus power 2 (**BP2**) LED is lighted if the 24 V output is present. If the indicator is off or blinking, there is an excessive current absorption or a faulty power supply unit.

